 




INFRARED HEATER
Instruction Manual
MODEL.: JH-HW05-15R

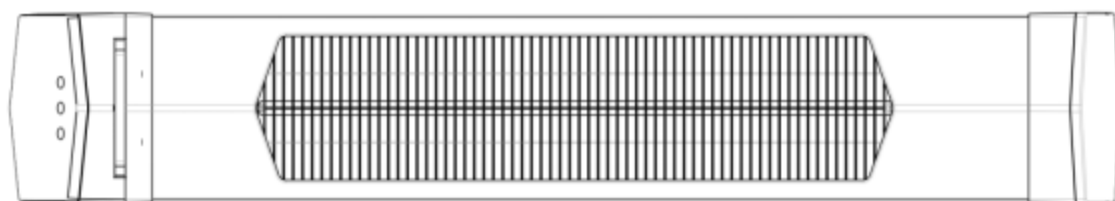

Thank you for buying and using our heater. In order to better use our products, please read this manual carefully before use; for the safety of you and your family, please keep the manual, warranty card and purchase invoice. Please contact us.

Thank you again for choosing our product, which will make your life more comfortable and warm!

IMPORTANT INSTRUCTION

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia, including the following:

CAUTION- High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9m) from the front of the heater and away from the side and rear.

1. Read all instruction before using the heater.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing (such as plastic bags).
4. Check the household voltage to ensure it matches the heater's rated specification.
5. Check the power cord and plug carefully before use to make sure that they are not damaged.
6. Before unplugging the power cord, be sure to turn off the power. When touching the unit, be sure your hands are dry to prevent from electric shock.
7. Do not use near to, or point the heater to, furniture, curtains, or other inflammable objects. Keep combustible materials, such as furniture pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
8. Do not block air intakes or exhaust in any manner to prevent a possible fire.
9. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
10. Always unplug the heater when not in use.
11. Prevent water from getting into the housing of the heater during operation or in storage. Always store in a dry area free from potential moisture.
12. Do not use in places where gasoline, paint, or other inflammable liquids are used or stored.
13. This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never locate the heater where it may fall into a bath tub or other body of water.
14. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or the like. Arrange the cord away from traffic areas and where it will not be tripped over.
15. Do not use on soft surfaces, like a bed, where openings may become blocked.
16. Do not operate any with a damaged cord, damaged plug, after the heater malfunctions, or if it has been dropped or damaged in any manner. Mechanical adjustment, or repair.
17. Do not insert or allow foreign objects to enter any ventilation exhaust opening as this may cause an electric shock or exhaust opening as this may cause an electric shock or fire, or damage the heater.
18. This heater is hot when in use. To avoid burns, do not let bare skin touch the hot

surfaces. If provided, use handles when moving this heater.

19. Use this heater only as described in this manual. Any other uses not recommended by the manufacturer may cause fire, electric shock, or personal injury and may void the warranty.

20. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

21. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.

22. To disconnect heater, turn controls to off, then remove plug from outlet.

23. **WARNING: RISK OF FIRE** Keep combustible material such as furniture, paper, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the side and rear when the heater is plugged in.

24. **CAUTION:** high temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9m) from the front of the heater and away from the side and rear. Impedance protected (this item may be changed according to the protection means of the motor).

25. Do not place any objects such as furniture, papers, clothes, and curtains closer than 3 feet to the front of the heater and keep them away from the sides and rear when the heater is plugged in.

26. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.

27. Do not operate any heater after it malfunctions. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing.


28. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.

29. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

30. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

31. SAVE THESE INSTRUCTIONS

Schematic diagram of the product components

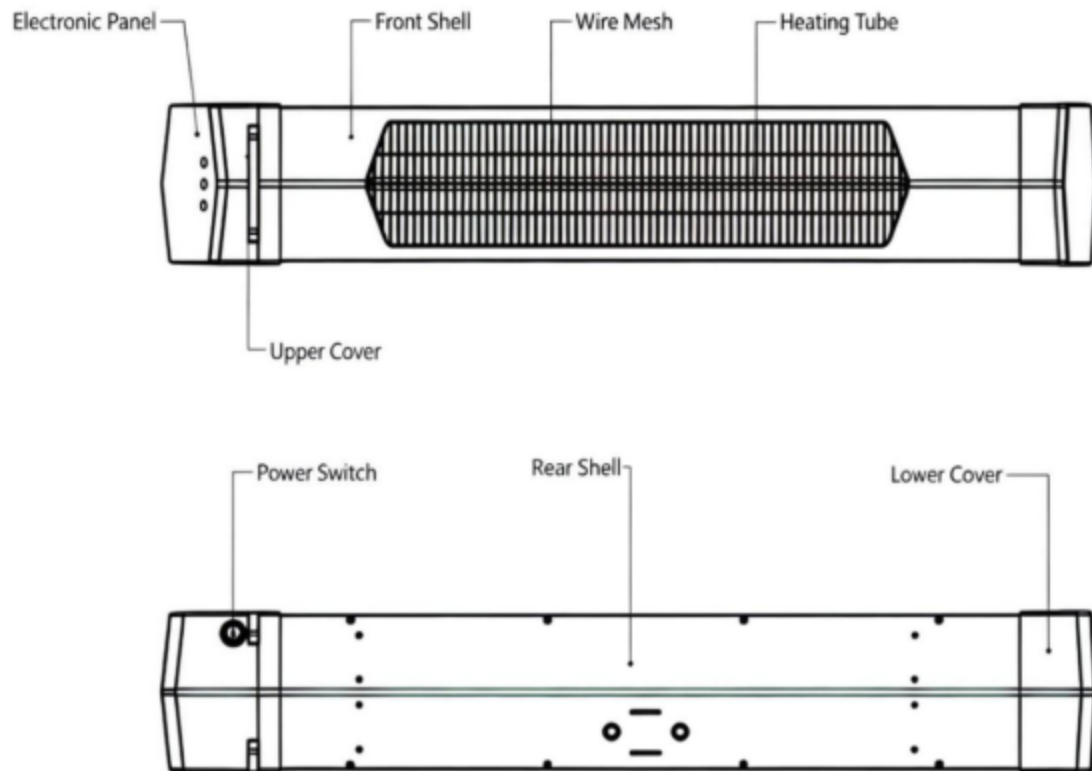

Product installation

1. After opening the box, remove the machine and its accessories to confirm that the product is intact.
2. Move the machine to the location to be installed
3. The bracket behind the machine is as indicated in **Figure 1** and then marked
4. Use a power drill into the hole wall (36mm depth, 6mm diameter) and insert the expansion bolt into the hole.
5. The support is screwed to the expansion bolt hole of the wall as shown in **Figure 2**



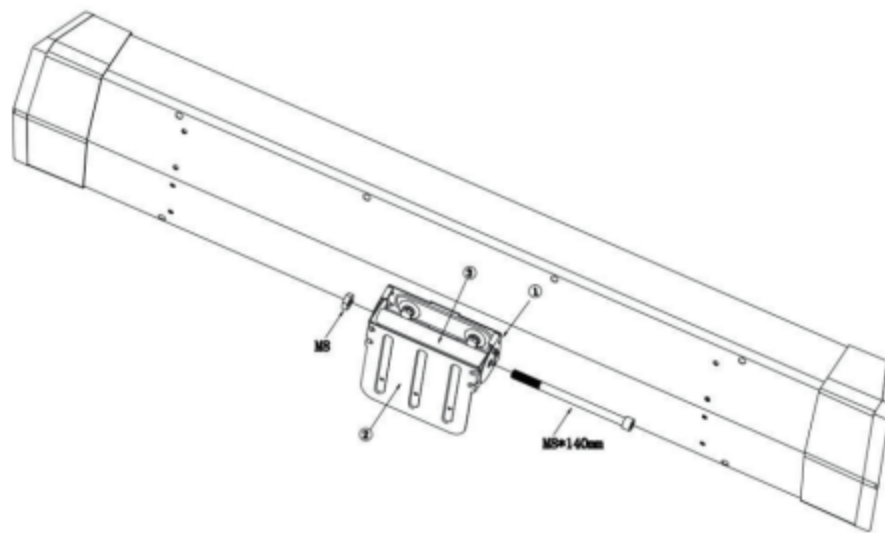


Figure 3

Installation instruction:

Figure 1 shows all the accessories in the installation package.

Figure 2, figure 3, figure 4, and figure 5 show the installation process.

First, insert ① to the product as figure 2 , and then put $\phi 22*8\text{mm}$ gasket on two M4*20mm screws and fix them on the product.

Second, install ② on ① as figure 3 , place ③ in the middle of ① and ② , insert M8*140mm screws into the holes of ③ , ② and ①, and secure the other end with M8 nuts.

Third, fix ④ with 6pcs $\phi 7\text{mm}$ plastic expansion tubes and 6pcs 4*35mm screws on the wall as figure 4 .

Finally, put the product into the slot of ④, and secure it with 3pcs 4*6mm screws as figure 5.

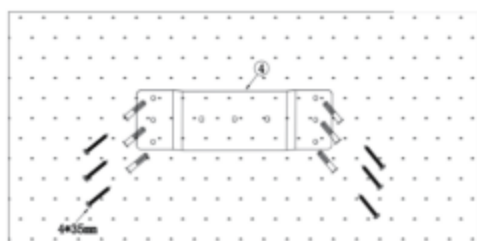 


Figure 4

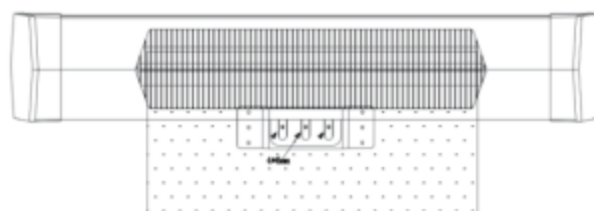 


Figure 5

Technical parameter table

model	Supply voltage	Rated frequency	Power
JH-HW05-15R	120V AC	60Hz	1500W

Button Function Description

CONTROL PANEL




① Plug it into a socket with the appropriate voltage (AC 120V). Note:

To prevent circuit overload, do not connect the heater to a circuit where other appliances are already in operation. It is suggested

to use a socket with a rated current of 15A or above separately.

- ② Switch on the main power switch at the back of the heater to guarantee the switch is in the " — " position for activation (if it is already on, disregard this step).

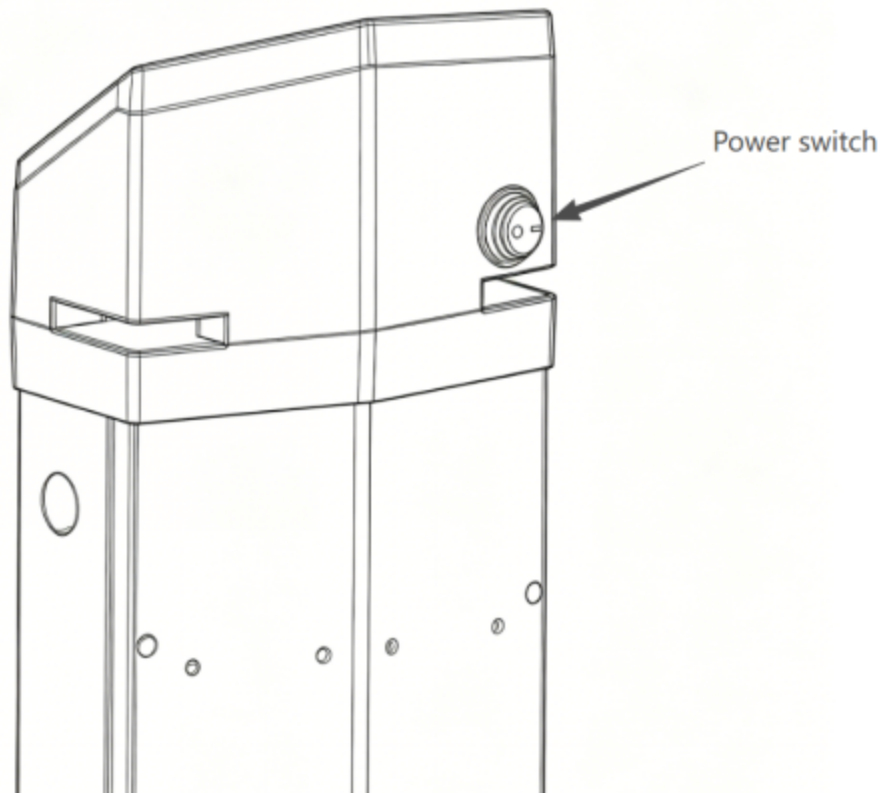

- ③ After powering on, the buzzer will emit a beep, the red power indicator light will commence flashing, and your heater is now ready for usage.



Power On/Off

- Press "⏻" to activate the heater. Commence low heating (P1), and the "☀️" will illuminate on the screen at this moment.
- Press "⏻" once again to deactivate the heater.



Mode/Heat Level Settings


- When the heater is on, press "☀️" to alternate between low heating (P1), medium heating (P2) and high heating (P3).



Automatic Shut-off Timer

- When the heater is on, press "🕒" to cycle through the timer settings ranging from 0 to 24 hours. At this time, the "🕒" icon will illuminate, and the set time will be displayed on the screen. Each press of "🕒" will extend the timer by 1 hour. Wait for the flashing to cease after the setting is completed to indicate a successful configuration. When the set time is reached, the device will automatically cease operation.
- To cancel the timer setting, adjust the timer setting to 0 or switch off the device.

REMOTE CONTROL:USER INSTRUCTION

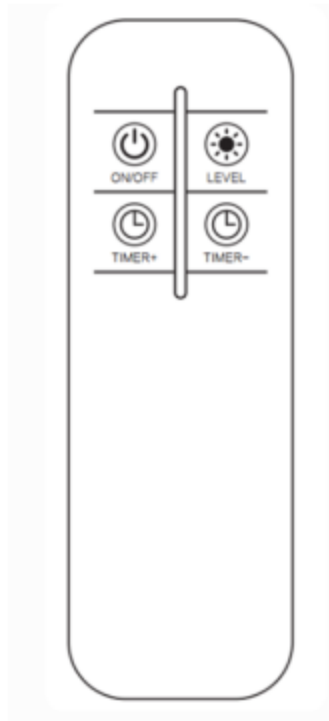

ON/OFF	Turn on or turn off the heater.
LEVEL	Adjust the heating level (cycle through different heating modes/levels).
TIMER+	Increase the set automatic shut-off timer duration (extends the timer).
TIMER-	Increase the set automatic shut-off timer duration (reduces the timer).

REMOTE CONTROL: INSTALLATION/REPLACEMENT OF BATTERIES

Due to transportation safety reasons, batteries are not included in the packaging.

Please prepare 2 pieces of 1.5V AAA batteries by yourself.

1. Flip the back of the remote control, hold and slide down the back cover of the remote control.
2. Insert 2 AAA batteries following the indications of the polarity symbols (+ and -) inside the battery compartment.

NOTES:

1. Use manganese or alkaline batteries of type "AAA". Do not use rechargeable batteries.
2. If not in use for a long time, please remove the batteries to prevent battery leakage from damaging your remote control.
3. Do not allow water or liquid to enter the remote control.
4. Do not dispose of batteries in fire, batteries may explode or leak.
5. Do not mix old and new batteries.
6. Dispose of the used batteries at appropriate recycling points or in accordance with local regulations.

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheating. For example: due to the total or partial obstruction of the vents. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the vents. Then switch it back on as described above. The appliance should now operate normally. If the problem persists, please contact Customer Service for assistance.


Note: The Company pursues a continuous improvement of the product, subject to technical changes without notice.

Description of product use

- 1、 Open the package to remove the heater and place the heater on the horizontal ground;
- 2、 Check whether the parts in the packing box comply with the packing list in the instructions;
- 3、 Check whether the power supply is consistent with the parameters of the local nameplate, and insert the power cord plug into the 15A power socket; Note: (Do not plug the plug with a wet hand to avoid electric shock. Pull out the power plug when moving the machine.) ;
- 4、 This machine is wall mounted type needs to be hung on the wall (wall operation mode please see the instructions);

! WARNING: This heater has a voltage rating of 120 volts. The cord has a three-blade, grounding-type plug. An adapter is available for connecting three-blade grounding-type plugs to two-slot receptacles. The grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

DO NOT DEFEAT THE SAFETY PURPOSE OF THE GROUNDED PLUG.

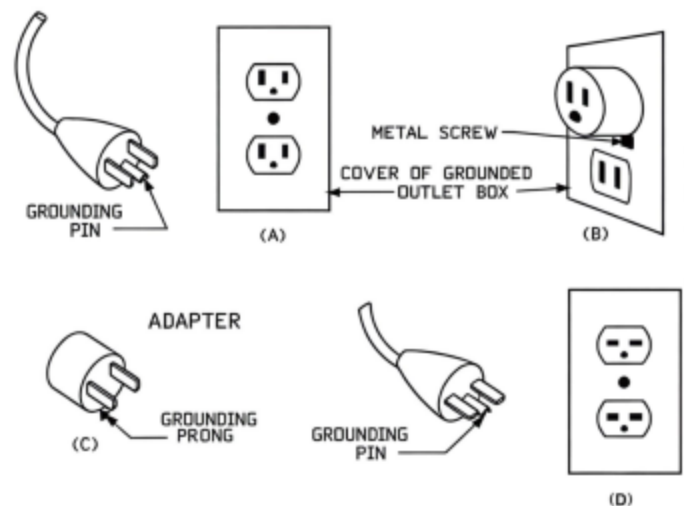

Storage and maintenance

- ① Clean and maintain, turn off the power supply and unplug the power plug before cleaning。
- ② When wiping and maintaining the heater, cut off the power supply first, after the product cooling, and then wipe the outer surface with a wet soft cloth. Soft wool brush can be used at the ventilation holes。
- ③ After cleaning and maintenance, load each component into the packaging box according to the original package。
- ④ Keep it properly in the dry place。
- ⑤ Clean maintenance only wipe with detergent, and then with a clean cloth。
- ⑥ Do not rinse directly with water。
- ⑦ Avoid using diluent, toluene, acid detergent, lamp oil, alcohol and other chemical reagents to wipe to avoid discoloration or deterioration

WARRANTY

AIR CHOICE warrants this product against defects in materials and/or workmanship under normal use for a period of ONE YEAR from the date of purchase by the original purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option, AIR CHOICE will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by AIR CHOICE, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes AIR CHOICE's property. When a store credit is given, the original product must be returned to AIR CHOICE and becomes AIR CHOICE's property. To obtain warranty service, e-mail AIR CHOICE Limited Warranty Service at airchoice@afterservice.vip. Please be prepared to describe the product that needs service and the nature of the problem.

This warranty does not apply to:

a) damage caused by failure to follow instructions relating to product' use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake, or other external causes; c) damage caused by service performed by anyone who is not a representative of AIR CHOICE; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

Manufactured by Cixi Jiahuan Electrical Appliance Co., Ltd. at No.39,Haitong Road, Guan Hai Wei East Industry District, Cixi, Zhejiang, CHINA for NINGBO KONWIN ELECTRICAL APPLIANCE CO., LTD. at Room 1001, Youyi Building, No.558 Renhe Road, Baishalu Street, Cixi City, Zhejiang, P.R.CHINA.

CONTACT US

Thank you for choosing **AIR CHOICE** product.

For any questions about your product or honor your warranty, please try the following methods to get in touch with us:

1. Scan the QR code below;
2. Write us at [**airchoice@afterservice.vip**];
3. Call us at **+1 (855) 620 5858**.

Our customer service time will respond ASAP within 24 hours!

Get 24/7 Assistance at



Visit: <https://airchoice.afterservice.vip>
Call: +1(855) 6205858 (US Toll-free)
Email: airchoice@afterservice.vip

Questions or Problems?

Tell us

We are here
to help with
our lifetime professional
100% satisfied service
within 24 hrs.