



— User Manual —

Air Choice Space Heater

Model No. PTC-1500R



Scan here to get vip service

Live Chat: <https://airchoice.afterservice.vip>

After-sales Email: airchoice@afterservice.vip

1. Please read the "user manual" carefully prior to the use of your fan heater so as to ensure proper operations.
2. Fan heater is a device with electric motor, which can be used at home, warehouse, workshop or greenhouse. The fan heater will automatically cut off the power supply for safety reasons when heated to a specific temperature.
3. There may be a trace of odor during the first few minutes of initial use. This is a normal phenomenon since the heating element is made of metal, its surface is protected by a layer of oil, so the odor is produced when heated, but the odor will quickly disappear.
4. The metal case is coated by plastic to be anti-corrosive and high temperature resistant.

Specifications

Model	Voltage	Power	Frequency
PTC-1500R	120V	1500W/750W	60Hz



- 1—Selector switch
- 3—Thermostat knob
- 5—Air grille
- 7—Holder

- 2—Indicator light
- 4—Power supply case
- 6—Knurled nut
- 8—Plastic pad

Use Guide

1. Put the heater upright and make sure it stays away from flammable and explosive materials.
2. Turn the thermostat knob clockwise to the maximum position. This knob will trigger overheating protection. The heater will automatically stop heating when heated to a specific temperature. Please turn the knob to its maximum setting before turn on the power.
3. Turn the selector switch to select the desired mode (Natural Fan/750W Low Heat/1500W High Heat).
4. Please turn off the heater before unplugging it.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, injury to persons, and hyperthermia , including the following:

1. **CAUTION:** In order to avoid overheating, do not cover the heater.
2. Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
3. Do not use this heater near showers, bathtubs or swimming pools.
4. When in use, do not cover the heater in any way or place it close to combustible materials. The heater will get hot, do not touch it whilst in use.
5. Do not place the heater directly under the socket.
6. Do not use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
7. Do not plug other devices in the same socket-outlet in use.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. Always keep children and pets at a safe distance and never leave them unsupervised in a room with a working heater.
10. Do not put the device at places where it's easy to be knocked down.
11. Always unplug or disconnect the appliance from the mains power supply when not in use. Do not leave the heater for too long when it is in use.
12. To prevent potential prevent electrical shock, please do not touch the device with wet hands.
13. Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Only dispose of electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within.
14. This appliance cannot be used by little children and persons with reduced physical, sensory or mental capabilities or lacking experience and knowledge if they have not been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

15. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

16. To avoid excessive room temperatures which can cause hyperthermia: **DO NOT** leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

1. Switch off and unplug from the power supply before cleaning.

CAUTION: Allow the product to completely cool before handling or cleaning it. Using a moist sponge to carefully clean the exterior surface of the product periodically. Do not allow water to run into the interior of the product, as this could create a fire and/or electrical hazard.

CAUTION: Do not use petroleum, toluene, etc. to clean the heater as they may damage the surface finish of the plastic components.

2. After cleaning, put the fan heater into a dry plastic bag for storage.

3. Set the heater switches to "OFF" and leave the heater to cool down fully.

The product can be stored a plastic bag when not in use. We recommend using the original (or appropriately sized) box. It is important to keep it in a safe, dry place.

Please try the following steps to solve the problem before reaching out to customer service.

Problem	Possible Cause	Solution
The heater does not operate.	Loose socket-outlet and therefore bad connection	Unplug and make sure connection between plug and socket is not loose.
	It's not plugged in or the socket doesn't work.	Make sure power is applied.
The heater only blows cold air, not hot air.	The switch is in the wrong position.	Turn the switch into heating mode.
	Thermostat has turned off because the desired temperature is reached.	Turn the thermostat clockwise (above room temperature). If the indicator light turns on, the heater will switch on automatically when it cools down.
The heater makes a sharp whine when it is in use.	The foot pads are laid unevenly.	Put the heater on a flat surface

AIR CHOICE warrants this product against defects in materials and/or workmanship under normal use for a period of **1 YEAR** ("Warranty Period") from the date of purchase by the original purchaser.

If a defect arises and a valid claim is received within the Warranty Period, at its option, AIR CHOICE will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or provide a store credit in the amount of the purchase price of the original product.

A replacement product or part, including a user-installable part installed in accordance with instructions provided by AIR CHOICE, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes AIR CHOICE's property. When a store credit is given, the original product must be returned to AIR CHOICE and becomes AIR CHOICE's property.

To obtain warranty service, e-mail AIR CHOICE Limited Warranty Service at **airchoice@afterservice.vip**. Please be prepared to describe the product that needs service and the nature of the problem.

This warranty does not apply to

Any Questions? ✉ airchoice@afterservice.vip

- 1) Damage caused by failure to follow instructions relating to product use or the installation of components;
- 2) Damage caused by accident, abuse, misuse, fire, floods, earthquake, or other external causes;
- 3) Damage caused by service performed by anyone who is not a representative of AIR CHOICE;
- 4) Accessories used in conjunction with a covered product;
- 5) A product or part that has been modified to alter functionality or capability;
- 6) Items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs;
- 7) Any product sold "as is" including, without limitation, floor demonstration models and refurbished items;
- 8) A product that is used commercially or for a commercial purpose.

Thank you for choosing **AIR CHOICE** product.

For any questions about your product or honor your warranty, please try the following methods to get in touch with us:

1. Scan the QR code below;
2. Write us at [airchoice@afterservice.vip];
3. Call us at **+1 (855) 620 5858**.

Our customer service time will respond ASAP within 24 hours!

Get 24/7 Assistance at



Use camera or QR scanner to scan

Visit: <https://airchoice.afterservice.vip>
Call: +1(855) 6205858 (US Toll-free)
Email: airchoice@afterservice.vip

Questions or Problems?

Tell us

We are here
to help with
our lifetime professional
100% satisfied service
within 24 hrs.

Manufactured by Cixi JiaHuan Electrical Appliance CO., LTD. at No.39, Haidong Road, Guanhaiwei Industry, Cixi City, Zhejiang, CHINA for NINGBO KONWIN ELECTRICAL APPLIANCE CO., LTD. at Room 1001, Youyi Building, No.558 Renhe Road, Baishalu Street, Cixi City, Zhejiang, P.R.CHINA.